




MADISON

Vanity Accessories

"Robe Hook"

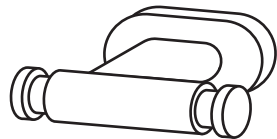

PEARLSINKS.COM

INTRODUCTION

Thank you for purchasing an authentic Pearl Sinks® vanity accessory. The fixture you have purchased is crafted out of the highest quality chrome-plated brass. Each and every fixture is carefully inspected by hand before leaving the production line.

Please read the instructions carefully to prevent any malfunction and damages.

CONTENTS

This fixture kit contains the following:

x2



Mounting Plates

x2



Plastic Anchors

x2



Wood/Anchor Screws

x1



Hex Wrench

TOOLS




Philips Screwdriver



Power Drill



1/4" Drill Bit



Hammer




Masking Tape



Level


INSTALLATION

- 1 Position the template where you would like to mount the fixture.
- 2 Level the template, then attach it to the wall with masking tape.
- 3 Drill two 5/16" holes on each corresponding mounting plate location.
- 4 Remove the template from the wall.
- 5 Insert the plastic anchors into the hole until it is flush with the wall.

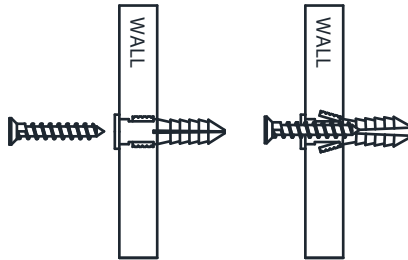

- 6 Install mounting plates onto the wall using the screws provided.
- 7 Install the the fixture and tighten the hex screw.

TEMPLATE

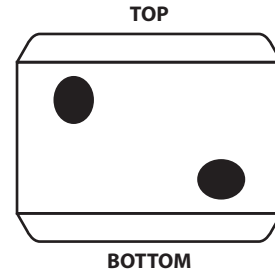

FACE THIS SIDE TOWARDS YOU